



内接头 (PH型软管安装式)

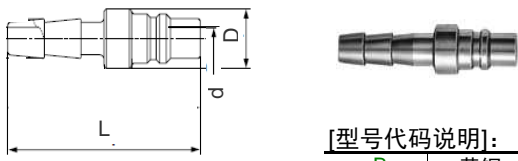

[型号代码说明]:
-B 黄铜

型号选择		适用软管 内径(inch)	L (mm)	d (mm)	D (mm)
型号	可选代码				
QK-02PH	-B	1/4	42	6	12
QK-03PH	-B	3/8	42	6	15


外接头 (SH型软管安装式)

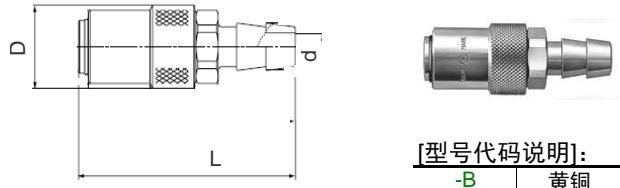

[型号代码说明]:
-B 黄铜

型号选择		适用软管 内径(inch)	L (mm)	d (mm)	D (mm)
型号	可选代码				
QK-02SH	-B	1/4	67	5	21
QK-03SH	-B	3/8	59	7	21


内接头 (PM型外螺纹安装式)

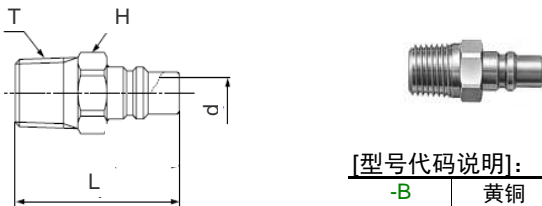

[型号代码说明]:
-B 黄铜

型号选择		螺纹T PT(R)	L (mm)	d (mm)	H (mm)
型号	可选代码				
QK-01PM	-B	R1/8	31	5.5	六角12
QK-02PM	-B	R1/4	34	6	六角14
QK-03PM	-B	R3/8	35	6	六角17


外接头 (SM型外螺纹安装式)

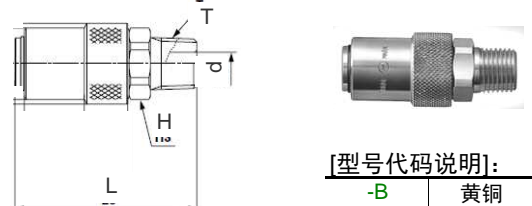

[型号代码说明]:
-B 黄铜

型号选择		螺纹T PT(R)	L (mm)	d (mm)	H (mm)
型号	可选代码				
QK-02SM	-B	R1/4	51	6	六角17
QK-03SM	-B	R3/8	52	6	六角19


内接头 (PF型内螺纹安装式)

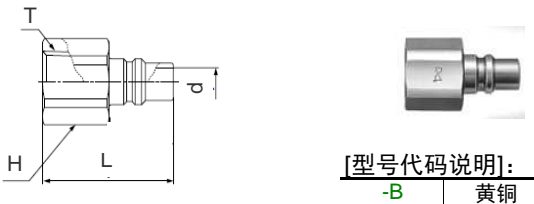

[型号代码说明]:
-B 黄铜

型号选择		螺纹T PT(Rc)	L (mm)	d (mm)	H (mm)
型号	可选代码				
QK-01PF	-B	Rc1/8	28	6	六角14
QK-02PF	-B	Rc1/4	30.5	6	六角17
QK-03PF	-B	Rc3/8	32	6	六角21


外接头 (SF型内螺纹安装式)

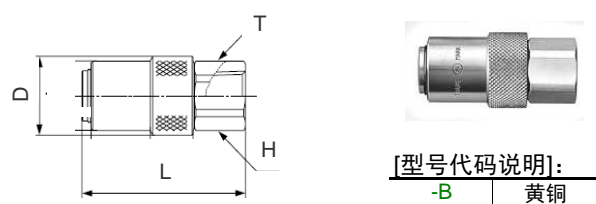

[型号代码说明]:
-B 黄铜

型号选择		螺纹T PT(Rc)	L (mm)	D (mm)	H (mm)
型号	可选代码				
QK-02SF	-B	Rc1/4	46.5	21	六角17


内接头 (PML型外螺纹L型安装式)

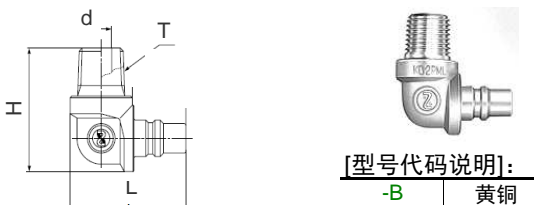

[型号代码说明]:
-B 黄铜

型号选择		螺纹T PT(R)	L (mm)	d (mm)	H (mm)
型号	可选代码				
QK-01PML	-B	R1/8	33.5	5	30.5
QK-02PML	-B	R1/4	33.5	6	33.5
QK-03PML	-B	R3/8	33.5	6	33.5

外接头 (SHL型软管L型安装式)

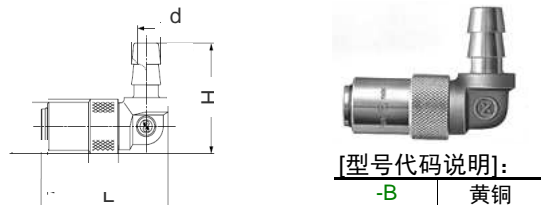

[型号代码说明]:
-B 黄铜

型号选择		适用软管 内径(inch)	L (mm)	d (mm)	H (mm)
型号	可选代码				
QK-02SHL	-B	1/4	52	4.5	42.5
QK-03SHL	-B	3/8	52	7	42.5